

# ARC Motor Programming - Quick Start Guide


Please read these instructions prior to starting. The instructions for the hard wired and battery ARC motor are the same.

Check if the remote is unlocked. Limits cannot be changed with a locked remote.

## OVERVIEW - SETTING MODES

The **P1** button is utilized to administer motor configurations as described below.

Hold **P1** button on motor head.

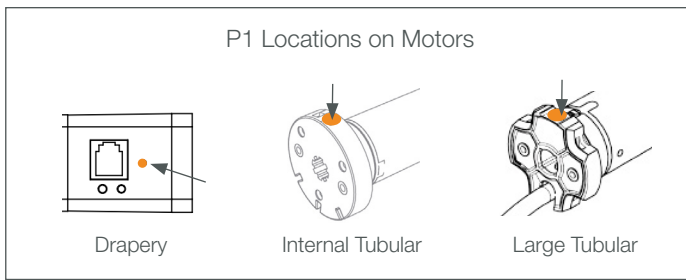

Activate Pairing Mode

Approx. 2 SECS JOG X1

Sleep Mode

Approx. 6 SECS JOG X2

Reverse Direction

Approx. 10 SECS JOG X3

Reset to Factory Settings


Approx. 14 SECS JOG X4 BEEP X4

## 1 PAIR MOTOR WITH CONTROLLER

Select a channel (15) on the controller.



Hold **P1** button on motor head.

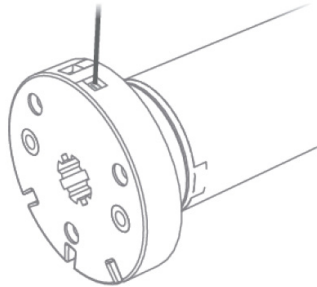

Hold **STOP** on controller.



Motor Response

Approx. 2 SECS JOG X1

RELEASE P1  
 EXT. BEEP X1

Motor Response

Approx. 2 SECS JOG X2  
 JOG X3  
 BEEP X3

## 2 CHANGE MOTOR DIRECTION

To reverse travel direction, hold both **UP** and **DOWN** on controller.




## 3 SET TOP LIMIT

To save upper limit, hold **UP** and **STOP**.



To save lower limit, hold **DOWN** and **STOP**.

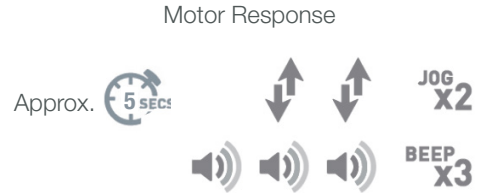

## 4 ADJUST LOWER LIMIT


Hold **DOWN** and **STOP** on the controller.



Move shade to the desired lowest position by pressing the **DOWN** button.



To save lower limit, hold **DOWN** and **STOP**.

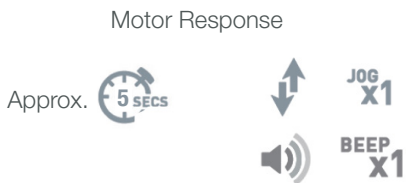

## 5 ADJUST UPPER LIMIT



Hold **UP** and **STOP** on the controller.



Move shade to the desired highest position by pressing the **UP** button.



To save upper limit, hold **UP** and **STOP**.

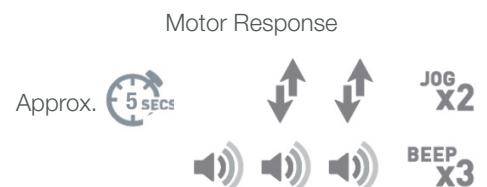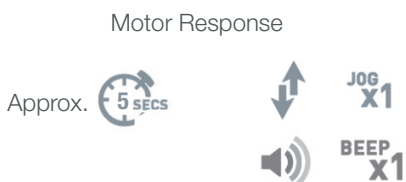

## 6 SET / DELETE A FAVORITE POSITION

Press **P2** on controller.



Press **STOP** on controller.



Press **STOP** on controller.



Motor Response



Motor Response



Motor Response



## 7 STEP MODE

Default motor mode is Roller after initial Limits have been set, use following steps to change to Step Mode.


Hold **UP** and **DOWN** on the controller.



Press **STOP**.



Motor Response

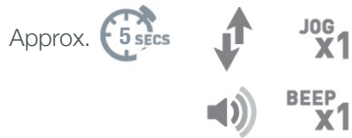

Motor Response



If motor is in Step Mode, use following steps to change to Roller Mode.

Hold **UP** and **DOWN** on the controller.



Press **STOP**.



Motor Response




Motor Response




## 8 CREATE / DELETE GROUPS USING P2

A = Existing switch or channel (to keep).


B = Switch or channel to add or remove.

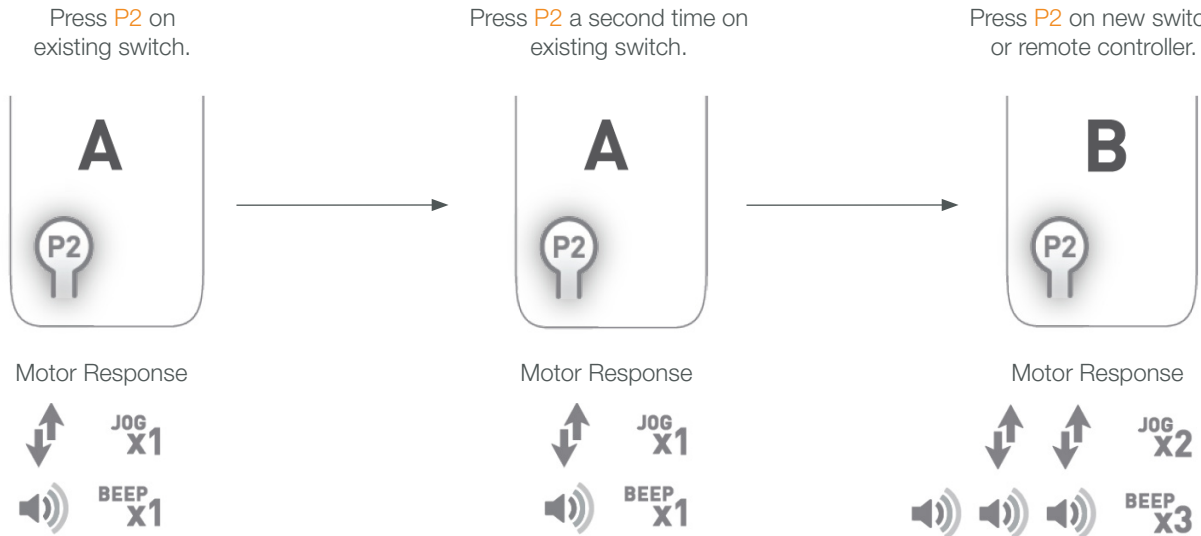

## 9 ADJUST MOTOR SPEED

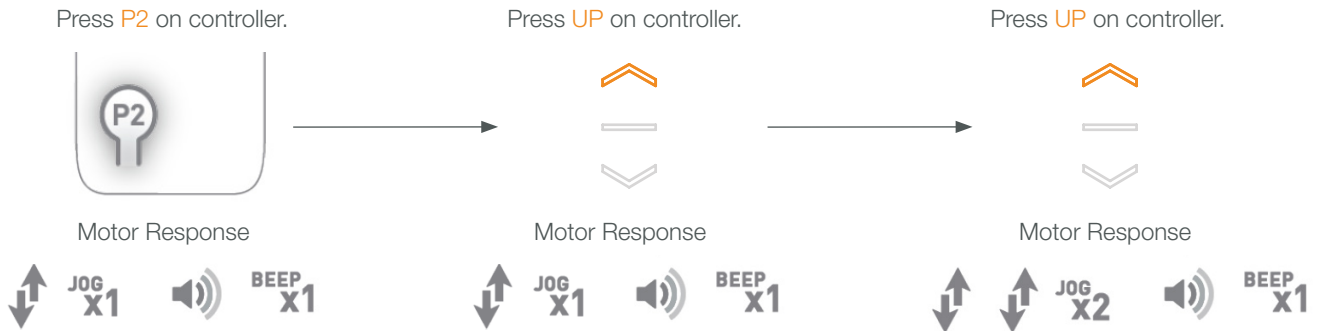


## 10 LOCK REMOTE

To switch modes hold right  button for 5 Seconds

15 Channel

1 Channel


Pressing the right  button for 1 second or less will display the current mode

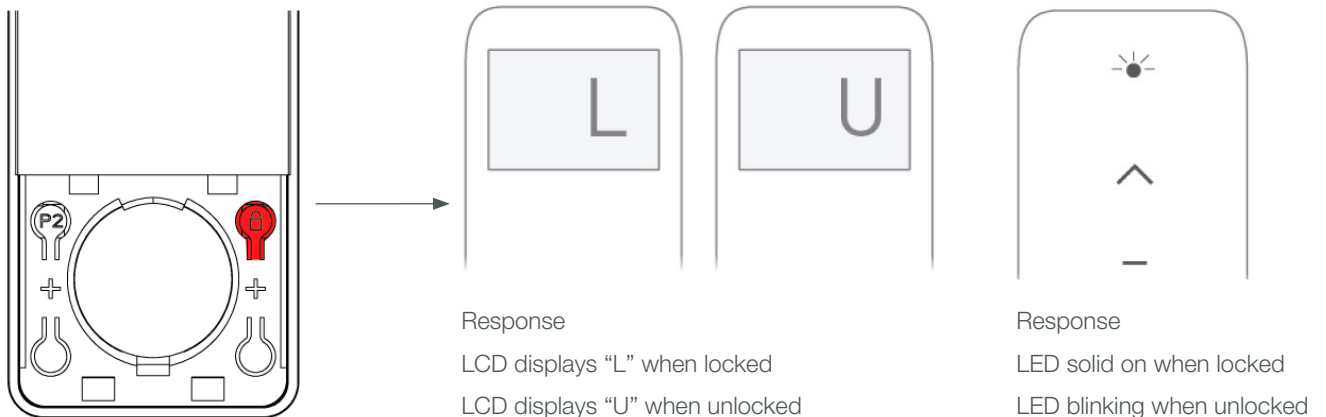

## 11 HIDE CHANNELS - 15 CHANNEL REMOTE ONLY

Your multi channel remote can be configured to have anywhere between 1 or 15 visible channels.

Inactive channels will not be visible when scrolling through the CH selection.

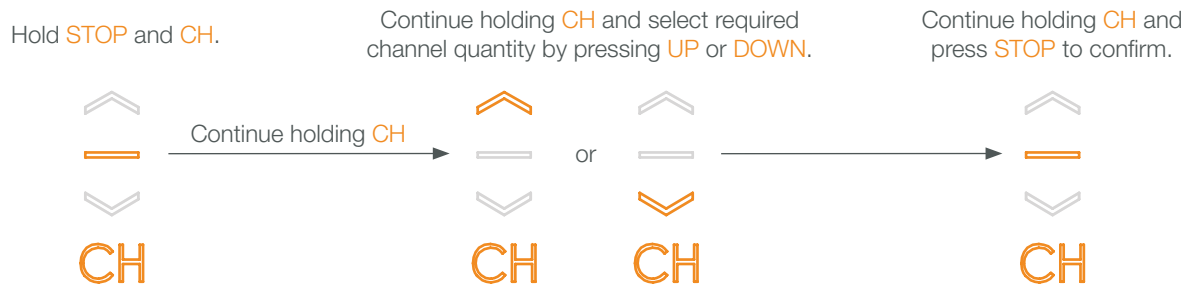

### Any Questions?

Contact our R-TEC Automation® in-house experts at 866.985.3423. Email us at [RTECAutomation@RowleyCompany.com](mailto:RTECAutomation@RowleyCompany.com).